

INSTALLATION DATA SHEET

MHDA SERIES



WARNING!

1. TO PREVENT RISK OF ELECTRICAL SHOCK DEACTIVATE/DISCONNECT POWER SUPPLY BEFORE INSTALLING, MAINTAINING OR RELAMPING FIXTURE.
2. TO REDUCE RISK OF FIRE OR EXPLOSION, DO NOT INSTALL WHERE THE MARKED OPERATING TEMPERATURE EXCEEDS THE IGNITION TEMPERATURE OF THE HAZARDOUS ATMOSPHERE(S).
3. THIS FIXTURE SHOULD BE INSTALLED BY QUALIFIED TECHNICIANS IN STRICT ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ANY LOCAL REQUIREMENTS.

INSTALLATION

1. Install fixture to mounting surface at four mounting locations (mounting hardware supplied by other).
2. Remove lens and reflector.
3. For supply connections use conductors suitable for min. 90° C.
4. Connect internal wires per wiring diagram on ballast, and according to NEC requirements.
5. Install lamps.
6. Replace Reflector and lens.
7. When replacing ballast, use only Class P or Type HL ballast.



AZZ/RAL
8500 Hansen Rd
Houston, TX 77075

Tel: (713) 943-0340
Fax: (713) 943-8354
Email: info@rigalite.com

Visit us at:
<http://www.rigalite.com>