

INSTALLATION DATA SHEET SXP SERIES GLOBE ASSEMBLY REMOVAL



- (1) Loosen # 10-32 set screw located on the outer rim of the globe assembly (2) Rotate globe assembly counter clockwise
- (2) If the globe assembly does not loosen with the help of a blunt screw driver and small hammer tap lightly on the gussets, located on the globe assembly.

