

**EMERGENCY BATTERY REPLACEMENT DATA
SHEET****IMPORTANT SAFEGUARDS**

When using electrical equipment, basic safety precautions should always be followed including the following:

DANGER - Do not install or service unless area is known to be nonhazardous. This Exit Sign has more than one power supply connection.

WARNING - Electrical Power must be turned off before and during installation and maintenance.

READ AND FOLLOW ALL SAFETY INSTRUCTIONS


1. This fixture should be installed in strict accordance with the National Electrical Code and any local requirements.
2. This fixture should be mounted in locations and at heights where it will not readily be subjected to tampering by unauthorized personnel.
3. To prevent ignition of hazardous atmospheres, disconnect fixture from the supply circuit before opening. Keep tightly closed when in operation. When AC power is disconnected, the battery power will be live.
4. To reduce risk of fire or explosion, do not install where the marked operating temperature exceeds the ignition temperature of the hazardous atmosphere(s).
5. Do not mount near gas or electric heaters.
6. Do not let power supply cords touch hot surfaces.
7. Do not attempt to service the battery inside this fixture. This fixture incorporates a sealed, no maintenance battery that is not field replaceable. Contact **RAL** for information on factory replacements.
8. The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
9. Do not use this equipment for other than intended use.
10. **Installation and servicing of this fixture should be performed by qualified personnel.**

SAVE THESE INSTRUCTIONS




BATTERY REMOVAL


1. Turn off electrical power.
2. Remove the end caps located on each side of the fixture.

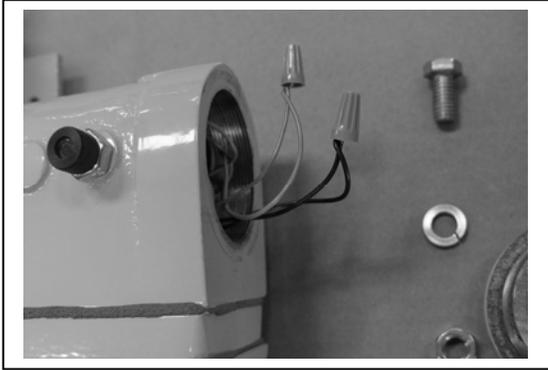


3. Pull the wires out on the side of the housing.
4. Remove the two wire nuts connecting the LED.
5. Remove the two nuts, bolts and washers located on top of either end of the housing.

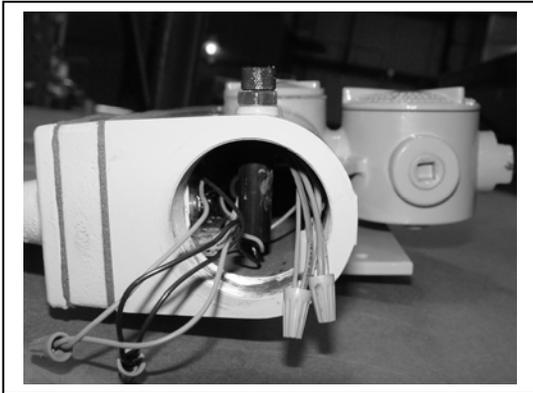


6. Remove the red LED indicator assembly from the housing.

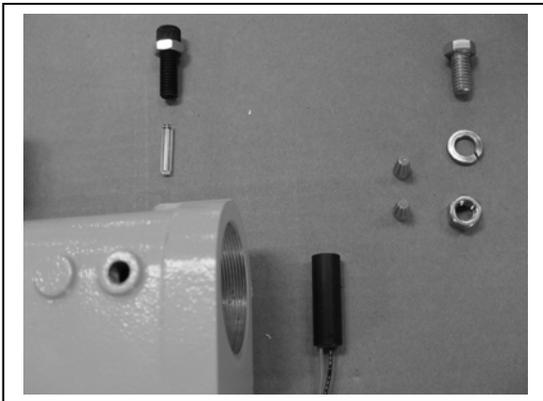

7. Protect the glass rod from damage.
8. Remove the screws holding the LED circuit board to the housing by inserting a screwdriver through the bolt holes.
9. Partially slide out the circuit boards from the right side of the ballast housing.
10. Remove the wire connector by sliding the connector out of the circuit board.

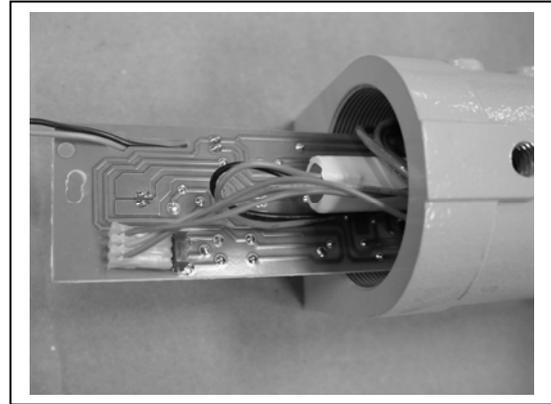

11. Remove the circuit board from the housing.
12. Remove the battery unit's wire connector from the circuit board.
13. Replace the battery and reverse the order to install.

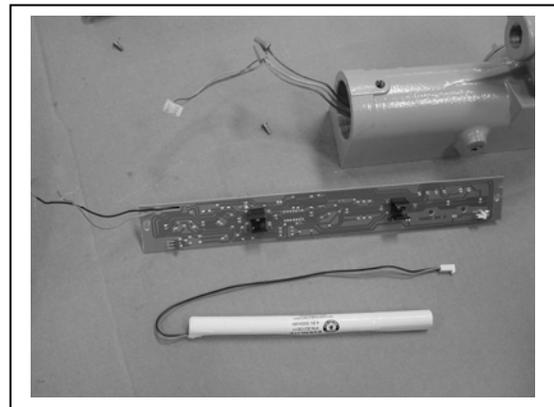

Rig-A-Lite
8500 Hansen Rd
Houston, TX 77075
Email: info@rigalite.com

Tel: (713)943-0340
Fax: (713)943-8354

Visit us at:
<http://www.rigalite.com>